



MODEL No. 554

 **infa-secure**  
baby products with a difference

[www.infa-secure.com.au](http://www.infa-secure.com.au)

## “Yasmine” Highchair




**INFA SECURE PTY LTD**

P.O. Box 487, Emu Plains 2750


NATIONAL SERVICE CENTRE:

(02) 4728 8090


**ASSEMBLY  
INSTRUCTIONS**

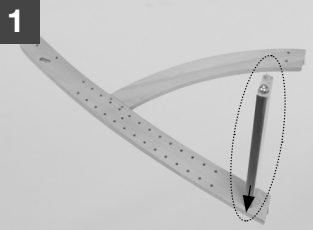


1 Start with one side. Line up support rails and screw into position. (Not too tight, just enough to hold in place)

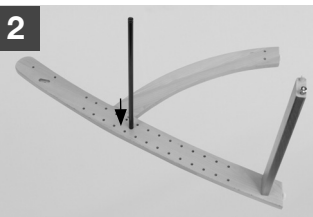


2 Insert the bar and screw into place (Not too tight, just enough to hold it in.)

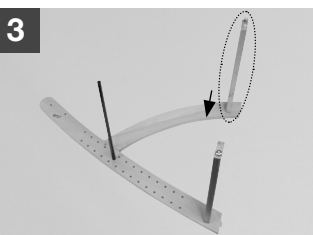


3 Join the wooden bar to the side part, make sure the holes are face down. (Allowing for the slotted cross dowel.)

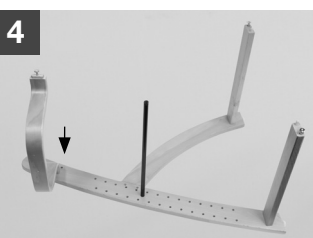


4 Place screw in front bar and lock the wooden bar into position.

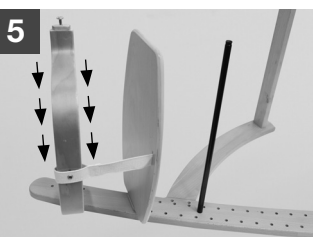

5 Thread the front bar through the loop in the Crotch strap, making sure that the strap is facing the front.

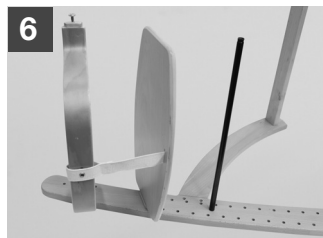


6 Make sure the holes in crotch strap and front bar align.

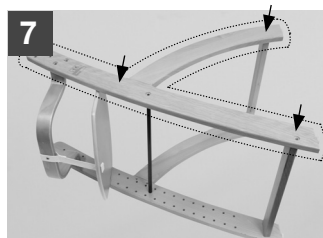

7 Place other side onto the frame. (easiest if done with chair laying down on completed side)



8 Line up holes and insert screws (Not too tight just enough to hold in place)

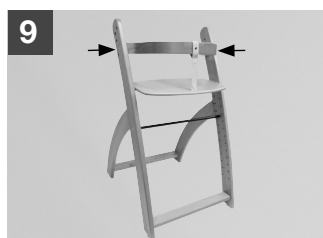

9 Stand the highchair upright, tighten front bar



10 Place the back into position



11 Insert screws and tighten.



12 Place plastic groove plugs into highest slots on side of legs. Slide seat into position. Place foot rest in the same way at desired height.



13 Now tighten up all screws, previously placed into frame (If seat or footrest adjustment is required, loosen steel support rails.)




14 Place the timber high chair cushion into position and attach velcro straps.




15 Line up the crotch strap with the hole in front bar and insert bookscrew inner thread. Tighten bookscrew.



16 Line up tray bracket to holes at the top of the side piece. (Note: these holes contain an inner thread.)

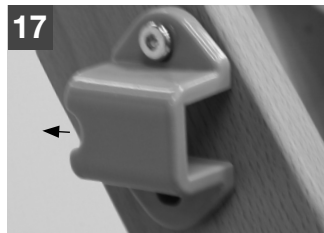

17 Make sure indent in bracket is facing rear of seat.

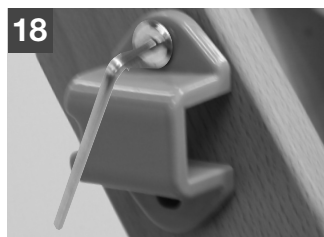

18 Insert and tighten screws.



19 The bracket should now resemble picture shown. Repeat process for other side.



20 Insert feeding tray into brackets.

21



The tray locks when the red button on the feeding tray has passed the indent in the bracket and protrudes.



**Your Yasmine Timber Highchair is now ready for use.**

Fig.1



Fig.2a


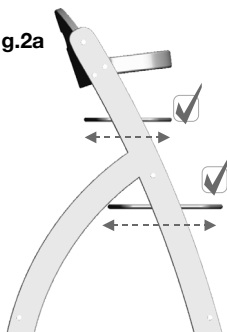


Fig.2b

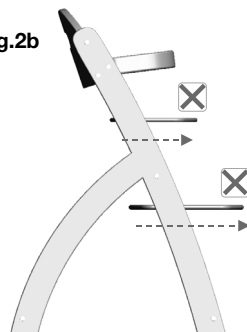

EN14988 : UN 2006

## IMPORTANT!

FILE FOR FUTURE CONSULTATION!

### CAUTION

- FOLLOW THE ASSEMBLING INSTRUCTION
- DO NOT TIGHTEN THE SCREWS UNTIL THE ITEMS HAVE BEEN FULLY ASSEMBLED.
- DO NOT USE THE CHAIR BEFORE THE CHILD CAN SIT BY ITSELF.
- DO NOT USE THE CHAIR IF COMPONENTS ARE MISSING OR BROKEN.
- DO NOT USE THE CHAIR UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.
- DO NOT PLACE THE CHAIR NEXT TO A HEATING SOURCE AND OR OPEN FIRE.
- USE A MOISTENED CLOTH FOR CLEANING.
- **WARNING:** DO NOT LEAVE YOUR CHILD UNATTENDED.
- **WARNING:** WHEN ANY HARNESS IS USED MAKE SURE THE HARNESS IS CORRECTLY FITTED.
- **WARNING:** WHEN THE CHAIR IS USED AS A HIGHCHAIR IN COMBINATION WITH THE FRONT BAR ALWAYS PLACE THE SEATBOARD IN THE HIGHEST POSITION (FIG.1)
- **WARNING:** NEVER PLACE THE SEAT AND FOOTREST TOO FAR TO THE FRONT (FIG.2 a/b)
- IN CASE THIS CHAIR IS USED IN COMBINATION WITH TRAY:  
TO ATTACH/DETACH THE TRAY, PRESS THE TWO RED BUTTONS AND SLIDE THE TRAY IN/OUT THE SUPPORT BRACKETS.
- IN CASE THIS CHAIR USED IN COMBINATION WITH A SEAT LINER:  
TO ATTACH/DETACH THE SEAT COVER, ATTACH OR DETACH THE VELCRO STRAPS.



CONSUMER ENQUIRIES: **(02) 4728 8080**

P.O. Box 487, Emu Plains 2750

Service No: (02) 4728 8090 Fax: 02 4728 8040